



### How to Program Your Weather Radio

1. Make sure the NOAA radio is plugged into an electrical outlet.
2. Look underneath the radio and slide the cover that shows **OPEN**. Make sure the NOAA radio has three (3) AA Batteries in the underneath of the radio. Place the cover back on the radio so that the batteries are covered.
3. Once the unit is plugged in and batteries are in place the screen should be flashing the time. (example 12:00AM)
4. Press the **MENU** button:
5. **SET TIME** will appear on the screen, next press the **SELECT** button. The hour of the time will be flashing, use the up or down **ARROW** to set the hour, press the right **ARROW** to move to the minute which will start flashing. Use the up or down **ARROW** to set the minute. After you have the time set to the correct time, press the **MENU** button twice. The screen will indicate **SAVING** time.
6. Press **MENU** again and press the down **ARROW** to **SET LANGUAGE**, press the **SELECT** button, select the appropriate language, press **SELECT** and **SET LANGUAGE** will appear again.
7. Press the down **ARROW** one time till **SET LOCATION** appears, press **SELECT**. Use the down **ARROW** to select **SINGLE**, **MULTIPLE**, or **ANY**.  
**SINGLE**: Only the County Location Code you enter will activate when a watch or warning is issued by NOAA.  
**MULTIPLE**: Multiple County Location Codes may be entered, allowing the radio to activate when any of those Counties receive a watch or warning.  
**ANY**: If selected, the radio will activate when any location within the Radio's Signal activates.

**RECOMMENDED: SINGLE**

8. Once selection has been made, press **SELECT**. **SAME 01** will appear, if you select **SINGLE**, press **SELECT** and type in the County Location Code using the **ARROW** buttons. Iredell County Location Code (037097). Once you enter the County Location Code, press the **MENU** button.
9. **SET LOCATION** will appear again, press the down **ARROW** button once. **ALERT TYPE** will appear in the screen. Press **SELECT**, the following options will appear: Voice, Display or Tone.

Voice: The Radio will alert with a Tone and then the recording will begin talking out loud.

Display: the radio alert will only appear on the screen, no audio will be heard.

Tone: the radio will only alert with a tone, you will have to go to the radio and press the **WEATHER/SNOOZE** button to listen to the watch or warning.

**RECOMMENDED:** Voice

10. Once you have made your selection, press **SELECT**. **ALERT TYPE** will appear again, press the down **ARROW** button twice. **SET CHANNEL** will appear, press **SELECT**. Use the **ARROW** button to select **CHANNEL 6** for the Mooresville Region. Press **SELECT**, **SET CHANNEL** will appear again.
11. Press **MENU**, the screen will indicate **SAVING**.

Your Radio has been programmed for the Mooresville/Iredell Region.